

Warnings



It is recommended to clean the threads and O-rings off dirt and old grease once or twice per year. Remember that reliable protection from water and dust cannot be provided by worn out sealing. The fouling as well as lack of lubricant cause fast wear-out of threads and

To clean the threads do the following:

sealing rings.

- 1. Unscrew the tailcap and remove the sealing ring carefully with a toothpick (do not use sharp metal things as they can damage the ring).
- 2. Wipe the sealing ring thoroughly with a soft cloth (or tissue). Do not use solvents. If the sealing ring is worn out or damaged replace it by a new one.
- 3. Clean the metal threads with a brush using ethanol. Be careful not to allow the applied liquid to get inside the flashlight or tailcap as it can cause fails in functionality of the flashlight.

After cleaning lubricate the thread and the sealing ring with polyalphaolefin-based silica grease, e.g. Nyogel 760G. The application of automotive and other improper grease can cause swelling and damage of the sealing rings.

In case of active operation and exploitation in dusty environments, it is recommended to perform cleaning and lubricating of the parts as often as required.

Service and Warranty

Armytek provides free warranty repair for 10 years (excluding batteries, chargers, switches and connectors which have 2 years warranty) from the date of purchase.

Warranty doesn't cover damage caused by:

- 1. Improper usage.
- 2. Attempts to modify or repair the flashlight by nonqualified specialists.
- 3. Longtime application in chlorinated or polluted water, or other liquids (other than water)
- 4. High temperatures and chemicals' exposure (including the exposure of liquid from defected batteries).
- 5. Usage of low-quality batteries.

Armytek Optoelectronics Inc. Web: www.armytek.com Email: service@armytek.com Address: 13-85 West Wilmot St, Richmond Hill, Ontario, L4B 1K7, Canada

Specifications are subject to change without notice.

FLASHLIGHTS IN THE WORLD

$-\cdot$ USER MANUAL $\cdot-$

Thank you for choosing the products of Armytek Optoelectronics Inc., Canada. Please read this manual carefully before using the flashlight.

Specifications


Armytek Optoelectronics Inc. is a Canadian manufacturer that produces powerful and reliable flashlights designed especially for your needs. The components made in the USA and Japan. **10 years no-hassle warranty**.

- Superb light of amazing constant brightness due to powerful electronics and active temperature control without timers.
- Rechargeable flashlight with magnet USB charger.
- Efficient TIR-optics and no "tunnel vision" effect even after continuous use.
- · Warning Indication of low battery level and high temperature.
- · Side switch for comfortable one-hand operation and easy modes switching.
- Multicolor State Indication and ultra low current drain in OFF-state more than 25 years.
- Magnet, removable clip, comfortable holster and possibility of tail-stand for multipurpose use.
- Solid body without long wires, weak rubber connectors and unnecessary boxes.
- Total protection from water, dirt and dust penetration flashlight continues to work even at the depth of 10 meters.

Model		Prime C1 Pro Magnet USB	Prime C2 Pro Magnet USB
LED / Optics		Cree XP-L / TIR	Cree XHP35 / TIR
Brightness stabilization type		FULL (constant light)	
Light output, LED / OTF lumens*		1050 / 970	2100 / 1700
Peak beam intensity, candelas		6770	9200
Hotspot / spill		20° / 80°	
Beam distance*		165 meters	192 meters
Modes, light output (OTF lumens*) and runtimes (measured with 18350 Li-lon 900 mAh / 18650 Li-lon 3400 mAh until the light output drops to 10% of the initial value)	Turbo2	970 lm / 30min	1700 lm / 1h
	Turbo1	470 lm / 1h	950 lm / 1.7h
	Main3	230 lm / 2.4h	420 lm / 4h
	Main2	90 lm / 6.5h	180 lm / 10.5h
	Main1	34 lm / 15h	35 lm / 50h
	Firefly3	6 lm / 2.5d	6 lm / 12d
	Firefly2	2.5 lm / 8d	1.7 lm / 40d
	Firefly1	0.4 lm / 60d	0.15 lm / 200d
	Strobe3	1Hz / 90 lm / 90h	1Hz / 180 lm / 52h
	Strobe2	1Hz / 970 lm / 3.3h	1Hz / 1700 lm / 5h
	Strobe1	10Hz / 970 lm / 1.7h	10Hz / 1700 lm / 2h
Power source		1x18350 Li-Ion	1x18650 Li-Ion
Size and weight (without batteries)		Length 91mm, body diameter 24.5mm, head diameter 24.5mm, weight 58g	Length 122mm, body diameter 24.5mm, head diameter 24.5mm, weight 62g

 * Light output for flashlights with Warm light are about 7% less, beam distances are about 3% less.

Remember that old or low-quality batteries can be damaged under heavy load and explode.

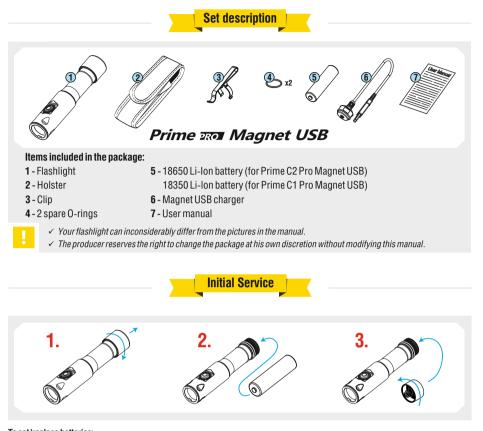

To set/replace batteries:

- Unscrew the tailcap.
- 2. Place the batteries with the positive contact (+) facing the head of the flashlight.
- 3. Adjust the tailcap and tighten it as far as it can go.

The flashlight is ready for operation.

We DO NOT RECOMMEND to leave power sources inside the flashlight for a long storage period, as batteries (especially, non-rechargeable) can leak for various reasons and damage the inner parts of the flashlight. If you want to keep your flashlight in a stand-by state with batteries in then use new and high-quality batteries and store the flashlight in acceptable for batteries operational temperature and revise the batteries' state at least once a month. If you have noticed any signs of batteries' defects then withdraw them from the flashlight and utilize. It is also recommended to replace discharged batteries with new ones before the storage as the chance of leakage is higher with discharged batteries.

How to turn on a magnet charger:

Unscrew the tailcap for 1/4 of a circle and turn on a magnet charger device to the tailcap. Approximate time for charging a fully discharged battery is 6-8 hours. We recommend using adapters with 1A and higher

Charger device battery indication:

1. Red color – the charging is going on. 2. Green color – the charging is finished. 3. Red color blinking - unscrew the tailcap for 1/4 for charging.





<u>Click x2</u>	Press & Hold	Main
Main → Firefly	Main1 → Main2	6K
Any Mode →Main	Main3	Q. B. J. J.
Click x2	Press & Hold	Firefly
Firefly ★★	OFF → Firefly1	6Km
Main	Firefly1 → Firefly2 Firefly3	E 99
Click x3	Press & Hold	Turbo
Any Mode 🗲 Turbo	Turbo1	6V
	↑ ♥ Turbo2	
Click x4	Press & Hold	Strobe
Any Modo - Check		
Any WOUL STLODE	Strobe1 -> Strobe2 Strobe3	Com 79
	Strobe3	g State Indication
Battery level	Strobe3	g State Indication
Battery level <pre> Sec </pre>	Switchin ON / OFF 1 2 C Pres	
<75% (()	Switchin ON / OFF 1 2 C Pres	
Battery level (100%) 5sec Low Battery Indi	Switchin ON / OFF 1 2 C Pres	s & Hold



The flashlight has 4 Sections of modes:

[Section 2] – Main modes

[Section 3] – Turbo modes [Section 4] – Special modes

Click: To turn on the last used mode.

Press and hold: To turn on Firefly1 mode in [Section 1].

In ON state:

In OFF state:

Click: To turn off the flashlight.

Press and hold: To start cycling through the modes of actual Section.

The same in OFF & ON states:

2 clicks: To turn on the Main mode [Section 2]. Then double clicks will switch modes between chosen modes in [Section 1] and [Section 2].

3 clicks: To turn on Turbo mode [Section 3].

4 clicks: To turn on Strobe mode [Section 4].

Flashlight has 2 types of operation:

1. General. The flashlight is switched on/off by 1 click.

2. Tactical. The flashlight will switch on in the last used mode only for the time the button is being pressed. This type of operation is useful for short-time lighting and setting signals.

To access the Tactical operation type, unscrew the tailcap to 1/4, press the button and tighten the tailcap again keeping the button pressed.

To return to the General type - press the button and while keeping it pressed - unscrew the tailcap to 1/4.

Automemorizing. After switching off the last used Mode is memorized for guick 1-click access at next switching on.

Lock-out function. Unscrew the tailcap to 1/4 for the protection from accidental switching on. State Indication will be turned off.

Multicolor State Indication. Shows the battery level by short flashes every 5 seconds.

Switching Multicolor State Indication ON/OFF. It is switched off by default in OFF-state and Firefly modes. To turn on and off: unscrew the tailcap to 1/4, press the button and holding the button pressed tighten the tailcap and then unscrew it again. The settings will be memorized even when battery is changed. Ultra-low current consumption allows color indication to work for more than 25 years.

WARM Warning indication shows the battery level and the temperature inside the flashlight.

< 25%

Low battery level. When it is < 25%, the color LED will show the warning level – flashing in orange color once in 2 second. With a further voltage reducing brightness will start to decrease in steps for safety of the battery and user. If brightness will be <25% from nominal value, the main LED will flash 2 times. Critical battery level <10% is red indicated once a second.

1sec

HOT

High temperature. When it increases to the warning level – the color LED flashes by orange 3 times once in 2 seconds. At critical level – it flashes by red 3 times once in 1 second, brightness starts to reduce. After cooling down the brightness increases to usual level.

Constant light. Powerful electronics provide constant brightness even in the Turbo1 mode, using all energy of the battery. And the Turbo2 mode gives the maximum brightness as the Overboost technology in cars, but until temperature of a flashlight and a discharge current of the battery don't exceed critical values.

Digital Light Stabilization & Safe Soft-Start System monitors battery voltage, starts the flashlight at an admissible brightness or decreases it by steps when the voltage dramatically fall down. These actions increase runtime, use all available energy, get longer lifetime of rechargeable battery and protect it from overdischarge or overheating.

Active temperature control. The flashlight can heat up in Turbo mode quickly. When the temperature become +60°C – the brightness decreases by small steps. After cooling-down (provided that battery voltage is sufficient) the brightness increases to the Turbo mode again. This stepping goes cyclically to maintain the user's safety and the flashlight's functionality. In conditions of good air-cooling the flashlight delivers light without stepping down even in Turbo mode. There are no preset timers for stepping, but real-time active temperature measurements.

[Section 1] - Firefly modes